



# Lenovo All In One C240 (Product Family) Hard disk Replacement

Written By: Internet Libre





## Step 1 — Hard disk




- Turn the PC around, and get out the 5 screws from the bottom

## Step 2 — Releasing the back cover

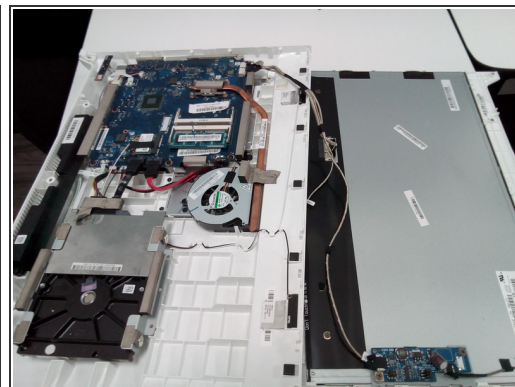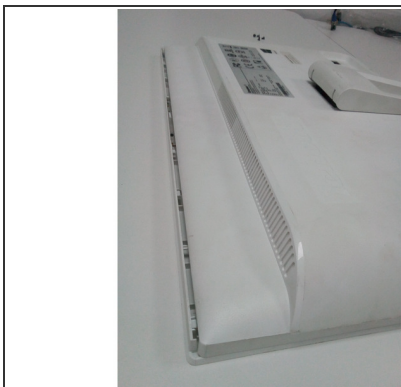

- Slide the back cover downward, until the screen release
- Turn the back cover around from the bottom

## Step 3 — Removing HDD

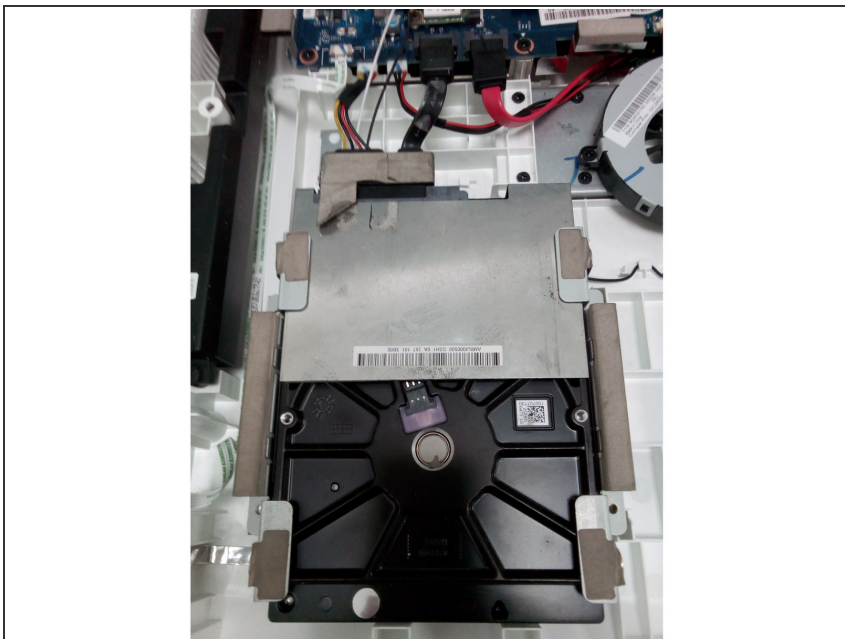

- Remove the 4 screws that hold the HDD
- Unplug the sata conection

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-03 12:51:18 PM.